

Items	Service Intervals (Odometer reading or months, whichever occurs first)															
	Months	12	24	36	48	60	72	84	96	108	120	132	144	156	168	
Odometer Reading	× 1000 km	15	30	45	60	75	90	105	120	135	150	165	180	195	210	
OPERATIONS AFTER ENGINE IS WARMED UP																
Check automatic transmission for fluid leakage (In case of leakage, check the fluid level)		I	I	I	I	I	I	I	I	I	I	I	I	I	I	
Replace automatic transmission oil	Normal usage														R	
	Severe usage							R							R	
Change engine oil	Normal usage	R	R	R	R	R	R	R	R	R	R	R	R	R	R	
	Severe usage															
Replace engine oil filter	Normal usage	R	R	R	R	R	R	R	R	R	R	R	R	R	R	
	Severe usage															
OTHERS																
Check body condition for damage		I	I	I	I	I	I	I	I	I	I	I	I	I	I	
Inspect Adblue level using MUTIII and report on repair order (refill on customer request).		I	I	I	I	I	I	I	I	I	I	I	I	I	I	
Perform diesel small quantity injection learning		I	I	I	I	I	I	I	I	I	I	I	I	I	I	
Reset maintenance service interval reminder		I	I	I	I	I	I	I	I	I	I	I	I	I	I	
Road test		I	I	I	I	I	I	I	I	I	I	I	I	I	I	

NOTE:

*1 : Use only MITSUBISHI MOTORS Genuine Super Long Life Coolant Premium or equivalent with proper mixture ratio of 50% anti-freeze and 50% demineralized or distilled water.

"Severe usage" specifications apply to only vehicles used under severe operating conditions.

Severe operating conditions include the following cases :

- (1) Driving in a dusty conditions or exposure to salty air or brine.
- (2) Driving on rough roads, on submerged roads, or hilly areas.
- (3) Driving in cold zones.
- (4) Engine idling for a long time, or short distance travel during cold weather.
- (5) Frequent or sudden application of brakes.

- (6) Trailer towing.
- (7) Use as a taxi, hire or rental vehicle.
- (8) More than 50% of heavy city traffic operation in temperatures above 32°C .
- (9) More than 50% of operation time at speeds of 120km/h or higher, during temperatures of 30°C or higher.
- (10) Operation under excessive load.